



D5-Evo/D10 Synchronisation Diagram

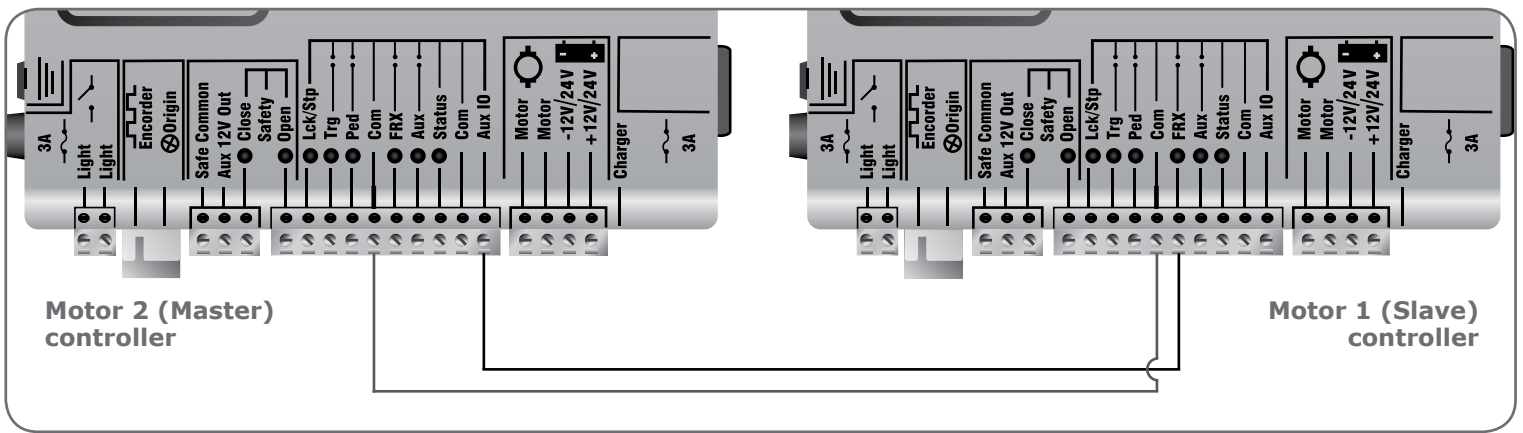

Master controller settings

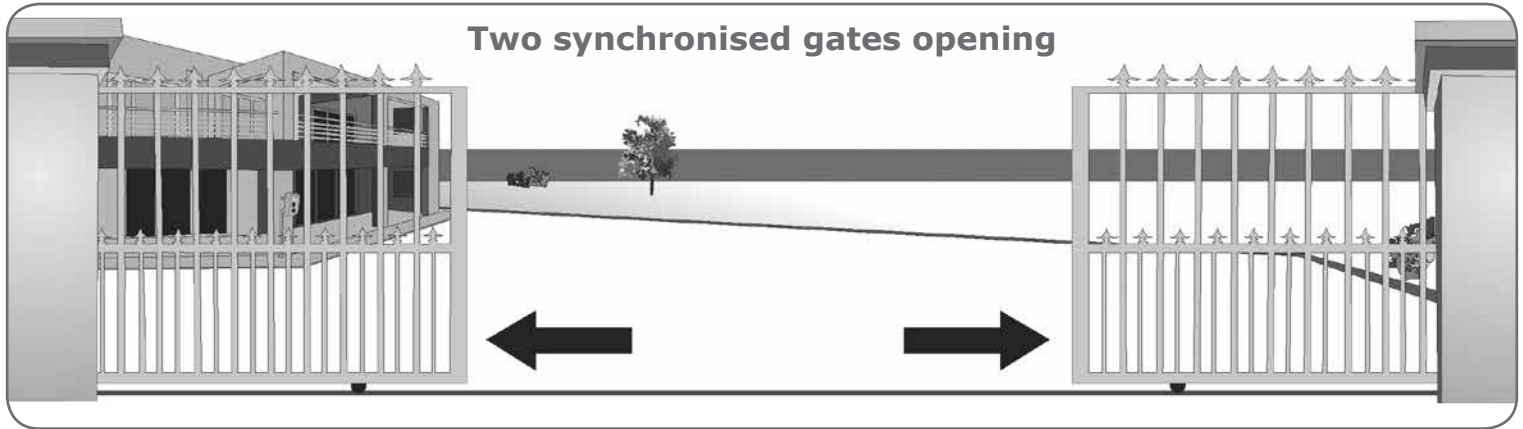

Safety

External gate indication status.....	Indicator output.....	AUX IO
Closed indication.....	Off	
Partly closed indication.....	Off	
Closing indication.....	Off	
Partly open indication.....	Off	
Opening indication.....	On	
Open indication.....	On	
Pedestrian indication.....	Off	
Unknown indication.....	Off	

Slave controller settings



Autoclose

Autoclose status.....	On
Autoclose timer.....	0 Seconds



- To open the gate fully, all triggering devices (remote controls, tag readers, keypads, intercoms, etc.) must be programmed/connected to the Master controller.
- If the pedestrian function is required, connect the triggering device's normally-open output to the PED terminal on the Slave controller or, in the case of remote controls, learn the remotes to activate the PED function on the Slave controller.



D5-Evo/D10 Synchronisation Diagram

Wiring of one set of infrared gate safety beams to two synchronised D-Series gate motors



Please Note: Ensure that beam test is disabled on both controllers

